Installation and Maintenance Guidelines

Date of issue: 15th October 2014



INTENDED USE

- · Amtico Click can be installed directly over most existing hard surface floors or sub-floors that are solid, smooth and flat, dry and clean.
- Amtico Click can be installed onto "Amtico International Underlay-19" (purchased separately).
- · Do not install Amtico Click until the sub-floor is properly prepared.
- Do not install Amtico Click in conservatories, outdoors or in unheated areas.
- Expansion joints are not required in the floor, provided that the longest continuous run of tiles is less than 8 linear metres.
- Expansion gaps of 5 mm are necessary when installing against any permanent fixture, including walls. If a room is smaller than 25m² this expansion gap can be reduced to 2mm and a flexible sealant used to fill the gap.
- The installed floor should be maintained at a temperature of 13 27°C throughout its service life.
- Suitable for use with underfloor heating, the temperature at the sub-floor surface should not exceed 27°C.

MATERIAL REQUIREMENTS

- Amtico Click stripwood tiles are 1245 x 178 mm (49 x 7"). There are 9 tiles in each box which covers approximately 2 square metres.
- Amtico Click stone tiles are 607 x 303 mm (24 x 12"). There are 11 tiles in each box which covers approximately 2 square metres.
- Amtico International Underlay-19 comes in rolls of 15 square metres.
- The table below offers guidance on the amount of floor tiles required for a regular shaped room, and assumes a typical wastage of 10% but please note that losses may be higher or lower depending on the amount of cutting that is necessary. It is recommended than an allowance for wastage is also made when selecting Amtico International Underlay-19.

NUMBER OF BOXES OF AMTICO CLICK REQUIRED

ROOM LENGTH					
ROOM WIDTH		3 metres	4 metres	5 metres	6 metres
	3 metres	5 boxes	7 boxes	9 boxes	10 boxes
	4 metres	7 boxes	9 boxes	11 boxes	14 boxes
	5 metres	9 boxes	11 boxes	14 boxes	17 boxes
	6 metres	10 boxes	14 boxes	17 boxes	20 boxes

USEFUL TOOLS

Utility knife and blades Rubber mallet Pullbar Spacers Hacksaw and blades Scissors Pencil Measuring tape

MATERIAL STORAGE

- Ensure materials delivered are correct style, colour, quantity and check tiles for visual defects before use. Installation of flooring implies acceptance
 of materials.
- Discrepancies must be reported immediately to your flooring supplier.
- Boxes of Amtico Click should be laid flat during transport and storage.




Installation and Maintenance Guidelines

Date of issue: 15th October 2014



PREPARATION FOR INSTALLATION

Step 1 - The base must be smooth, flat and fit for purpose

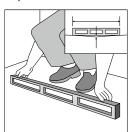

 Amtico Click can be installed over stone, vinyl, linoleum or laminate flooring, but carpeting must be removed. Concrete slabs and stone floors may be uneven and have high levels of moisture, which will require correction. If the subfloor is rough or uneven, this could create an unsightly appearance to the finished floor, and should be corrected using a suitable leveling compound on a concrete base, or by overlaying with plywood on a wooden base.

Any loose planks of wood should be nailed down prior to overlaying with plywood which must be suitably screwed down.

In cases of doubt regarding subfloor condition, seek professional help or contact your retailer.

Tiles and subfloor must be allowed to stabilise to a constant temperature between 18°C-25°C for a period of at least 24 hours before and during the installation. If tiles have been stored outside of this temperature range, then it is recommended that this is increased to 48 hours. Amtico Click tiles must be kept away from direct sunlight, heaters or air vents for proper conditioning.

If installation is to take place onto a stone or ceramic floor, then any grout lines should be infilled with a suitable fast-setting mortar which should be allowed to dry before starting installation.

Step 2 - Undercutting of door frames (optional)




 Skirting boards may be removed and door frames undercut if required, to allow for possible expansion of the finished floor ensuring there is an allowance for expansion under the door frames.

When laying in more than one room, tiles should not run continuously from one room to another - they must be isolated from one another by using appropriate profiles at the doorways. Your retailer will be able to supply suitable profiles. There should be an expansion gap around all fixed objects and the installed floor – this includes pipe feedthroughs, walls and profiles.


INSTALLATION

Step 3 - Laying of Amtico International Underlay-19. Outside of roll should be placed facing down.

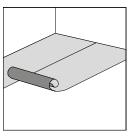

- We recommend "Amtico International Underlay-19" is used for
 installing Amtico Click, as it will take out minor surface imperfections
 and make the floor quieter underfoot. However, the use of underlay is
 unnecessary if the substrate is good quality and sound insulation is not
 required. It is recommended that Underlay-19 is laid at right angles
 (90 degrees) to the direction of the planks. The Underlay-19 should
 be unrolled with the outer side of the roll facing downwards and cut
 slightly oversize repeat this process until the whole area has been
 fitted.
- The Underlay-19 should be laid on to the subfloor making sure that air bubbles and wrinkles are not introduced. Do not stretch the Underlay-19 or force it into position.
- The Amtico International Underlay-19 should be floating joints between sheets can be held together using adhesive tape but must not be attached to the subfloor, for example by using double-sided tape. Excess Underlay-19 can be trimmed off when the installation is complete.

Step 4 - Laying of first plank with tongue side facing wall using spacers

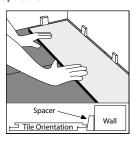

- Check the long edges of the first plank the narrower machined profile (approximately 2 mm wide) is the tongue and the wider 4 mm profile is the groove.
- It is recommended that long side of the tiles are laid parallel to the longest wall; this is particularly true in long, narrow rooms. To give a professional look it is recommended that the installation is balanced, such that the tiles that are cut in against this wall are approximately the same width as those cut in against the opposite wall.

Simply measure the width of the room and calculate how many full rows or tiles will fit – the space remaining should be halved to indicate the width of the first and last row of tiles. If the space is calculated to be less than 6'' (152 mm) it is recommended that the number of full rows is reduced by one and the width of the cut tiles in the first and last rows is increased accordingly.

Tiles can be cut to size using a metal ruler and sharp blade. This can be achieved by scoring several times through the upper part of the tile, and then snapping the tile in two – check the cut for any loose edges which should be removed.

When installing tiles, always work from left to right in the laying area, with the tile's tongue side facing the wall.

Page 2 of 4




Installation and Maintenance Guidelines

Date of issue: 15th October 2014



Step 5 - Fitting of second tile

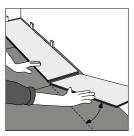


 Attach the second plank by laying the end connection at an angle accurately on top of the first plank and drop into position ensuring that the long edges of both planks are aligned.

Continue this process across the room until the maximum number of full length planks can be fitted together.

Measure the remaining space, cut a plank to suit and fit into place, allowing for the required expansion gap.


Step 6 - Cutting and fitting of final plank in first row

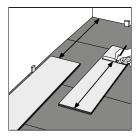

TIP: If the last plank is less than 200 mm in length, it is recommended that a small section be cut from the other end of the row, which can then be slid across the room to create space for a larger infill of plank. For stone tiles set these out in a Brick fashion.

To install the next row, again starting from the left hand side, set the tongue of the first plank into the groove of the already fitted row at an angle of about 30° and lower it into place.

Step 7 - Use of offcut from previous row (optional)

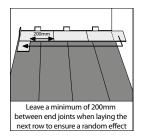


TIP: The offcut from the first row can be used as the first plank in the second row if the joints are well separated.

The second tile in this row should be located against the short edge
of the first tile and the tongue of the long edge gently pushed into the
exposed groove section of the tiles in the first row.

It may be necessary to lift both tiles slightly from the floor to get a good fit.

A tapping block and mallet can be used if necessary to complete the final locking of the tiles together. Do not tap the groove directly with the mallet and any force that is applied should be kept to a minimum. Tile offcuts can be used as a tapping block.

Step 8 - Fitting of additional planks in second row

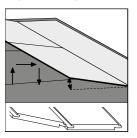

 Continue across the room until the second row is completed. Repeat this procedure for all subsequent rows until all full width tiles have been fitted.

Step 9 - Measure and cut final row of planks allowing for expansion gap




 To lay the last row the distance between wall is measured and planks can be cut to size, again allowing for expansion gaps.

Installation and Maintenance Guidelines

Date of issue: 15th October 2014




Step 10 - Pullbar and rubber mallet can be used for final row of planks

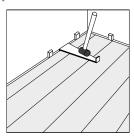

 The use of a pullbar in conjunction with a rubber mallet is recommended for ensuring the tongues and grooves of the final two rows are well connected.


FINISHING

Step 11 - Refitting of skirting board with hidden expansion gap

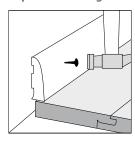

Remove all spacers and trim off any exposed pieces of Underlay-19.
 When replacing skirting boards or fitting edge trims and any other items, for example furniture or shelving, these should never be fixed to the tiles, or through the tiles to the base – the floor must remain as a floating installation.

Step 12 - Fixing edge trim

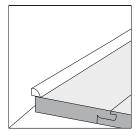

 A suitable edge trim of your choice can be used to cover expansion gaps. These should be fixed to the skirting or wall and not to the flooring.

Dispose of all waste, including tile offcuts, in accordance with any national or local regulations.

CLEANING

- All floors should be swept and dust mopped regularly.
- Prepare a correctly diluted solution of Amtico FloorCare Maintainer.
 Damp mop the floor using a micro-fibre or other suitable mop. Apply the solution using a well wrung mop. Do not flood the floor with water. Rinse the mop frequently and change the solution as necessary. Rinse the floors thoroughly and allow the surface to completely dry. The use of steam cleaners should be avoided.
- Wipe up spills immediately and thoroughly clean the area using Amtico FloorCare Spillage Remover.

MAINTENANCE TIPS

- When kept clean and dry, Amtico Click floors have excellent slip resistant properties. However, in common with other smooth floor coverings, water, other liquids, grease, or other contaminant on the surface of the floor can make them slippery.
 - Overspray from furniture polish and other spray products should be avoided as they can cause slippery floors.
- Amtico FloorCare Entrance Matting can effectively remove many abrasive and foreign materials from foot traffic and cut down on tracked-in water. This will reduce the maintenance requirement and extend the life of the floor. Talk to your retailer for more information. Avoid other types of matting as these may leave stains.
- Protect against scratching from furniture feet by using wide, freemoving castors, glides, rollers or felt pads. Use furniture cups under heavy items or appliances to prevent indentation.
- Do not allow cigarettes, matches or other very hot items to contact the floor which may become permanently damaged.

CONTACT INFORMATION

For further advice on installation instructions contact Amtico AfterCare Services:

Tel: 024 7686 1409 (Monday - Friday 08:45 to 16:45) e-mail: technical.support@amtico.com

